

City



CIT2127
plate flat / Teller flach
27 cm



CIT2117
plate flat / Teller flach
17 cm



CIT2120
plate flat / Teller flach
20 cm



CIT2126
plate flat / Teller flach
26 cm



CIT2124
plate flat / Teller flach
24 cm



CIT1921
plate deep / Teller tief
21 cm



CIT1230
bowl / Schale
30 cl



CIT1240
bowl / Schale
40 cl



CIT1416
dish / Schale
16 cm



CIT1413
dish / Schale
13 cm



CIT1410
dish / Schale
10 cm



CIT1407
dish / Schale
7 cm



CIT3604
creamer / Giesser
40 cl



CIT3515
creamer / Giesser
15 cl



CIT3930
lid / Deckel

CIT3850
pot / Kanne
50 cl

CIT0030
mug / Becher
29 cl



CIT1714
saucer / Untertasse
14 cm

CIT0222
cup / Tasse
22 cl



CIT1714
saucer / Untertasse
14 cm

CIT0219
cup / Tasse
19 cl



CIT1714
saucer / Untertasse
14 cm

CIT0213
cup / Tasse
13 cl



CIT1713
saucer / Untertasse
13 cm

CITY

CITY